


INSTALLATION INSTRUCTIONS FOR BUILT-IN BOX


INLINE 225

INLINE 225 roller shutter boxes can be installed on any window (PVC, aluminium or timber). Concealed installation is possible only on windows with a frame thickness of up to 94 mm. Installation of the boxes is straightforward; however, to ensure proper roller shutter operation, follow the instructions below and use the recommended screws.


1. FASTENING THE CONSOLE BRACKET:

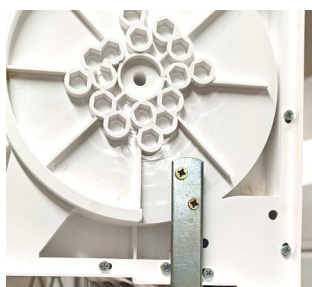

First fasten the bracket to the console using 4x12 mm screws.
Important: The screws must not be longer than 12 mm!

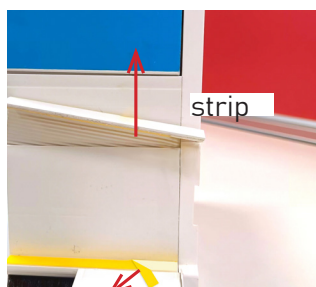


Remove the strip. Yellow tape zavihamo - this part of the roller shutter will rest against the outside of the window frame.

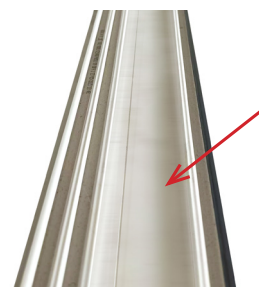


Apply the RAL tape to the upper part of the window profile.



Place the roller shutter on the window frame, align it (left / right) and fasten the bracket from the side using 4x20 mm screws (self-tapping screws may be used).

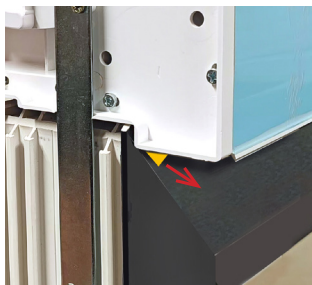

Peel off the yellow tape between the roller shutter and the window.

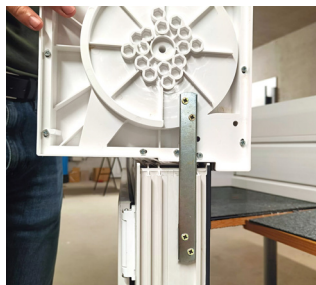

Final appearance of the box fixed to the window frame.




Reinsert the strip; first fold back the yellow tape so that it can be peeled off more easily afterwards.

2. FASTENING THE STRAP WINDER



Fastening the strap winder to the window with 4x20 mm screws


3. FASTENING THE ALU GUIDE RAILS:

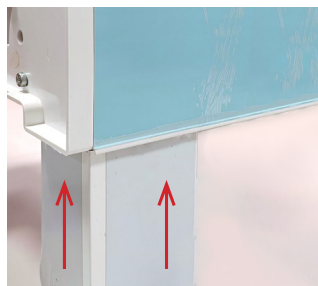

Fitting the ALU guide rail



Fastening the guide rail with 4x40 mm screws

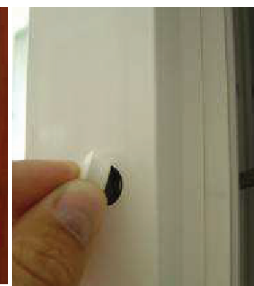

Covering the holes with caps