

INSTALLATION INSTRUCTIONS FOR BUILT-IN ROLLER SHUTTER

MULTI-ROLLBOX®

Roller shutter boxes Multi-Rollbox can be installed on any type of window (PVC, aluminium, or wood). Flush installation is possible only on window frames with a thickness of up to 75 mm. The installation of the box is simple; however, for the roller shutter to function properly, it is important to follow the instructions below and use the recommended screws.

1. ATTACHING THE MOUNTING PROFILE:



The "tooth" rests against the outer side of the window frame.



Use self-tapping screws 3.9×19 mm at approximately every 30 cm.

ATTACHING THE DECORATIVE CAPS



Screw holes may be covered with decorative caps.



Appearance of the console with inserted decorative caps.

2. INSTALLING THE BOX:



Variant A
The box slides onto the mounting profile.



Variant B (1.)
The box hooks onto the "tooth" of the mounting profile.



Variant B (2.)
The box clicks onto the mounting profile.




Variant B (3.)
For wider elements, the box needs to be opened and manually guided so it properly sits on the window frame.

3. ATTACHING THE BRACKET HOLDER:



First attach the holder to the console using screws 4×12 mm. **Important:** Screws must not be longer than 12 mm!

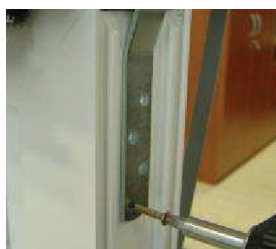

Attach the holder to the window frame using screws 4×20 mm (self-tapping possible).

4. ATTACHING AUTOMAT



Final appearance of the mounted roller shutter box.



Attach the automation to the window using screws 4×20 mm.

5. ATTACHING THE ALUMINIUM GUIDES:




The correct position of the ALU guide is 7 mm from the edge of the box.



Slide the ALU guide onto the box.



Adjust the ALU guides so that the "tooth" remains hidden inside the guide, right next to the inner wall of the guide.

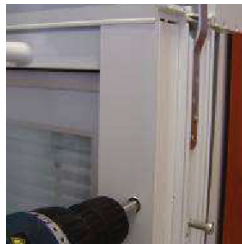

Fix the guides using screws 4×40 mm.



Cover the screw openings with caps.